

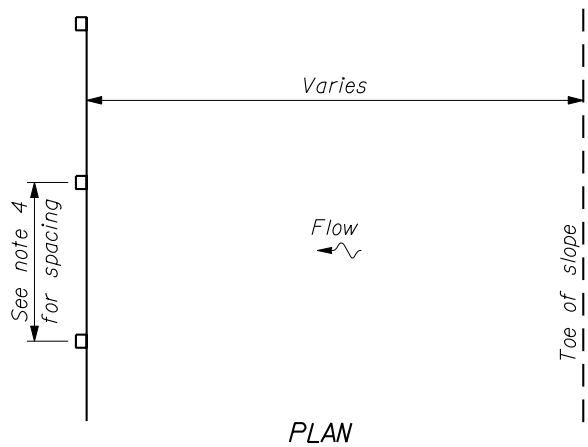
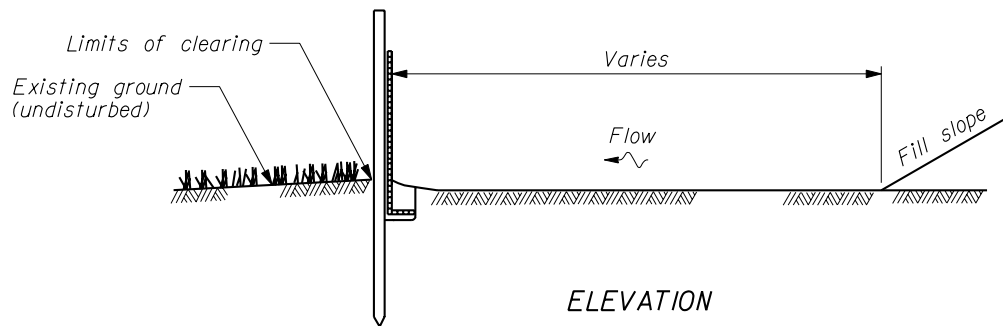


NOTE:


1. Use drainage ditch installation for low flow conditions only when specified on Erosion Control Plan.
2. Alternate preassembled silt fence options (geotextile, type V-B) will be allowed as long as specified dimensions are satisfied. Follow manufacturer's recommendations for installation procedures. All types must ensure silt fence remains attached to, and does not slide down, supporting posts.
3. Install silt fence along ground contours. Curve ends of silt fence upgrade to prevent water from running around the ends.
4. 3.0 m [10 ft] (max.) spacing with fence support.
1.8 m [6 ft] (max.) spacing without fence support.

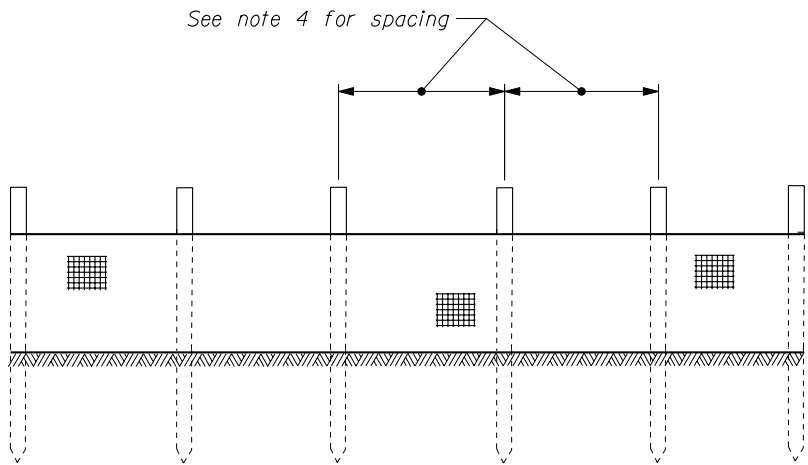

SILT FENCE INSTALLATION AT TOE OF FILL

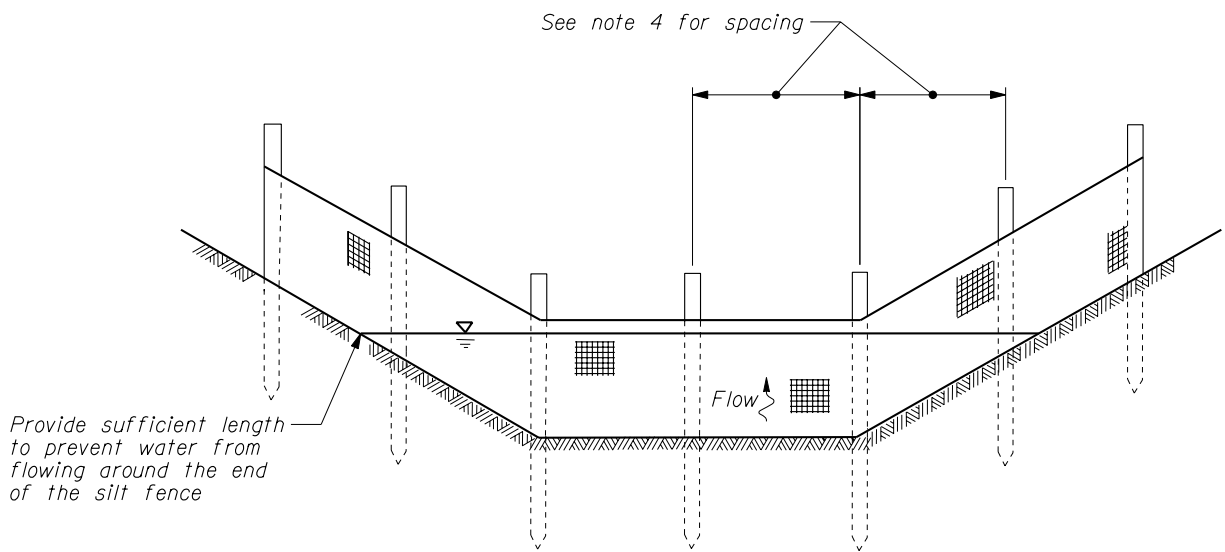

SILT FENCE INSTALLATION IN A DRAINAGE DITCH
(See note 1)

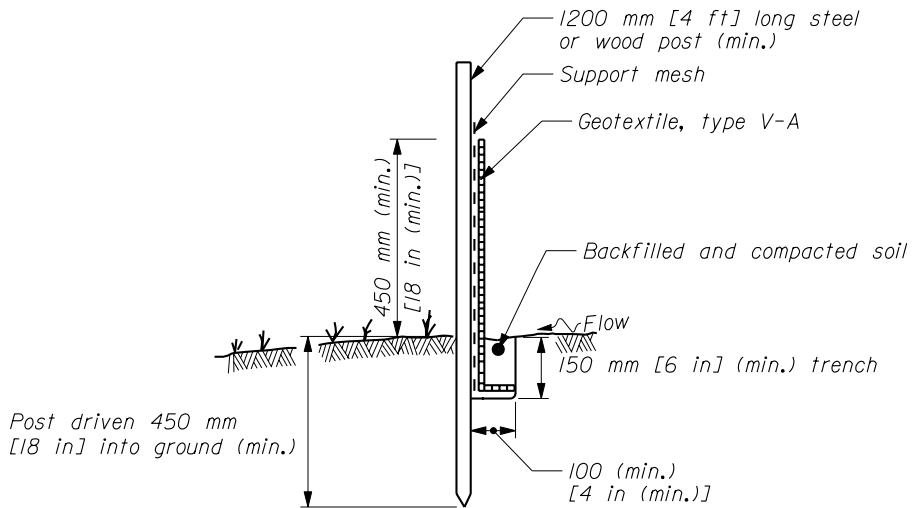

POST AND GEOTEXTILE INSTALLATION DETAIL

NO SCALE

U.S. DEPARTMENT OF TRANSPORTATION
FEDERAL HIGHWAY ADMINISTRATION
WESTERN FEDERAL LANDS HIGHWAY DIVISION

DUAL UNIT DETAIL

SILT FENCE

DETAIL APPROVED FOR USE 4/2002

REVISED:

DETAIL

W157-1